



Original	Recharge
 Power	 Power
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 EPG	 Guide / EPG / -/--
 Source	 AV / Input / RDS
 Format	 Picture / Format
 Menu	 Menu / Home
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right

Original	Recharge
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Options	 Setup / OPT /
 Page/CH -	 CH- / Page-
 Page/CH +	 CH+ / Page+
 Vol -	 Vol-
 Vol +	 Vol+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original		Rechange		Original		Rechange	
7 PQRS	7	AUX - HDD 7	7				
8 TUV	8	USB 8	8				
WXYZ 9	9	BLUETOOTH 9	9				
0	0	HDMI - SAT 0	0				

