



Original	Rechange
On/Standby	Power
Display	Display / Media
DVD / BD	Shift + 2
VCR / DVR	Shift + 4
CBL/SAT	Shift + 0
Game	Shift + 9
AUX	Shift + 7
TV / TAPE	Shift + 5
TV / TAPE	Shift + 1
TUNER	Shift + 6
PORT	Shift + 8
CD	Shift + 3
Muting	Mute / Dimmer
CH/Disc/Album	CH+ / Page+
Vol+	Vol+
CH/Disc/Album-	CH- / Page-
Vol-	Vol-

Original	Rechange
Up	Up
Left	Left
Enter	OK
Right	Right
Setup	Setup / OPT /
Down	Down
Return	Back / Return
Audio	Audio / Lang I/II
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Movie Tv	Red / Netflix / Search
Music	Green / APP / Repeat





 





 



 

 




 
 
 
 

 

 

 

 

 

 

 

 

 

Original	Rechange
Game	Yellow / YouTube / Repeat
Stereo	Blue / Prime Video / Random
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10/--/--10/Dimmer/D.Tun	Guide / EPG / --
0/11	0
CLR/Sleep/12	Fav / Marker / PC
CLR/Sleep/12	Sleep / Timer
CLR/Sleep/12	Exit / Cancel / Clear

Original	Rechange





Original	Rechange
 Power BD/DVD	 Power
 DVD/BD	 Smart / List
 CBL/SAT	 Display / Media
 Vol+ Receiver	 Vol+
 Vol- Receiver	 Vol-
 Top Menu	 D.Menu / Top
 Up BD/DVD	 Up
 Menu BD/DVD	 Menu / Home
 Left BD/DVD	 Left
 Enter BD/DVD	 OK
 Right BD/DVD	 Right
 Setup BD/DVD	 Setup / OPT /
 Down BD/DVD	 Down
 Return BD/DVD	 Back / Return
 Audio BD/DVD	 Audio / Lang I/II
 I<< BD/DVD	 I<< / Preset-
 >>I BD/DVD	 >>I / Preset+

Original	Rechange
 << BD/DVD	 << / Tune-
 Play BD/DVD	 Play / Slow
 >> BD/DVD	 >> / Tune+
 Pause BD/DVD	 Pause / Step / Freeze
 Stop BD/DVD	 Stop / Hold
 Search BD/DVD	 Red / Netflix / Search
 Repeat BD/DVD	 Green / APP / Repeat
 Random	 Blue / Prime Video / Random
 Play Mode	 Yellow / YouTube / Repeat
 1 BD/DVD	 1
 2 BD/DVD	 2
 3 BD/DVD	 3
 4 BD/DVD	 4
 5 BD/DVD	 5
 6 BD/DVD	 6
 7 BD/DVD	 7
 8 BD/DVD	 8





Original	Rechange
9 BD/DVD	9
+10/--/--10	Guide / EPG / --
0/11 BD/DVD	0
CLR/12 BD/DVD	Fav / Marker / PC
CLR/12 BD/DVD	Exit / Cancel / Clear
Power CBL/SAT	Shift + Power
CH Disc/Album+ CBL/SAT	Shift + CH+ /
CH Disc/Album- CBL/SAT	Shift + CH- /
Guide CBL/SAT	Shift + Guide / EPG / --
Up CBL/SAT	Shift + Up
Menu/Prev CH CBL/SAT	Shift + Menu /
Left CBL/SAT	Shift + Left
Enter CBL/SAT	Shift + OK
Right CBL/SAT	Shift + Right
Setup CBL/SAT	Shift + Setup / OPT / Tools
Down CBL/SAT	Shift + Down
Return CBL/SAT	Shift + Back / Return

Original	Rechange
<< CBL/SAT	Shift + << /
Play CBL/SAT	Shift + Play /
>> CBL/SAT	Shift + >> /
Pause CBL/SAT	Shift + Pause / Step /
Stop CBL/SAT	Shift + Stop /
Movie Tv/Search CBL/SAT	Shift + Red / Netflix /
Music/Repeat CBL/SAT	Shift + Green / APP /
Game/Random	Shift + Yellow / YouTube /
Stereo/Play Mode CBL/SAT	Shift + Blue / Prime
1 CBL/SAT	Shift + 1
2 CBL/SAT	Shift + 2
3 CBL/SAT	Shift + 3
4 CBL/SAT	Shift + 4
5 CBL/SAT	Shift + 5
6 CBL/SAT	Shift + 6
7 CBL/SAT	Shift + 7
8 CBL/SAT	Shift + 8





Original	Recharge	Original	Recharge
9 CBL/SAT	+ Shift + 9		
0/11 CBL/SAT	+ Shift + 0		





Original		Rechange		Original		Rechange	
	Power CD		Power		Play CD		Play / Slow
	CD		Smart / List		>> CD		>> / Tune+
	CH/Disc+ CD		CH+ / Page+		Pause CD		Pause / Step / Freeze
	Vol+ Receiver		Vol+		Stop CD		Stop / Hold
	CH/Disc- CD		CH- / Page-		Search CD		Red / Netflix / Search
	Vol- Receiver		Vol-		Repeat CD		Green / APP / Repeat
	Up CD		Up		Random CD		Blue / Prime Video / Random
	Left CD		Left		Play Mode CD		Yellow / YouTube / Repeat
	Enter CD		OK		1 CD		1
	Right CD		Right		2 CD		2
	Setup CD		Setup / OPT /		3 CD		3
	Down CD		Down		4 CD		4
	Return CD		Back / Return		5 CD		5
	Audio CD		Audio / Lang I/II		6 CD		6
	I<< CD		I<< / Preset-		7 CD		7
	>>I CD		>>I / Preset+		8 CD		8
	<< CD		<< / Tune-		9 CD		9





Original		Rechange		Original	Rechange
10	+10/--/--10/D.Tun/ Dimmer CD	GUIDE EPG	Guide / EPG / -/--		
11	0/11 CD	HDMI - SAT 0	0		
12	CLR/Sleep/12	PC FAV MARKER	Fav / Marker / PC		

 

 





Original		Rechange		Original		Rechange	
	Power Receiver Zone 2		Power		>> Zone 2		>> / Tune+
	CH Disc/Album+ Zone 2		CH+ / Page+		Pause Zone 2		Pause / Step / Freeze
	Vol+ Zone 2		Vol+		Stop Zone 2		Stop / Hold
	CH Disc/Album- Zone 2		CH- / Page-		Movie Tv Zone		Red / Netflix / Search
	Vol- Zone 2		Vol-		Music Zone 2		Green / APP / Repeat
	Up Zone 2		Up		Game Zone 2		Yellow / YouTube / Repeat
	Left Zone 2		Left		Stereo Zone 2		Blue / Prime Video / Random
	Enter Zone 2		OK		1 Zone 2		1
	Right Zone 2		Right		2 Zone 2		2
	Setup Zone 2		Setup / OPT /		3 Zone 2		3
	Down Zone 2		Down		4 Zone 2		4
	Return Zone 2		Back / Return		5 Zone 2		5
	Audio Zone 2		Audio / Lang I/II		6 Zone 2		6
	I<< Zone 2		I<< / Preset-		7 Zone 2		7
	>>I Zone 2		>>I / Preset+		8 Zone 2		8
	<< Zone 2		<< / Tune-		9 Zone 2		9
	Play Zone 2		Play / Slow		+10/--/--10/D.Tun/ Dimmer Zone 2		Guide / EPG / -/-





Original	Recharge	Original	Recharge
 0/11 Zone 2	 0 0		
 CLR/Sleep/12	 PC Fav / Marker / PC		

