

 

 

 

 



 

 

 

 

 



 

 

 

 

 



 



 











 



 

 

 


 
 

























 







Original		Rechange		Original		Rechange	
	Power		Power		0		0
	Video		Shift + 4		10+		Guide / EPG / -/-
	Mute		Mute / Dimmer		Goto		Text / Goto
	Open / Close		Eject / Surround		<<		<< / Tune-
	USB		Shift + 8		Vol -		Vol-
	Prog		TV/Radio /		Vol +		Vol+
	Mark		Fav / Marker / PC		I<<		I<< / Preset-
	Clear		Exit / Cancel / Clear		Play / Pause		Play / Slow
	1		1		Stop		Stop / Hold
	2		2		>>		>> / Tune+
	3		3		Repeat		Green / APP / Repeat
	4		4		A-B		Yellow / YouTube / Repeat
	5		5		>>I		>>I / Preset+
	6		6		Menu / Ripping		Menu / Home
	7		7		Up		Up
	8		8		Setup		Setup / OPT /
	9		9		Left		Left





Original	Recharge	Original	Recharge
 Enter	 OK		
 Right	 Right		
 Title	 Sound / Title		
 Down	 Down		
 OSD	 Display / Media		
 Zoom	 Zoom / Size		
 Angle	 Info / Angle		
 Audio	 Audio / Lang I/II		
 Sub-T	 Subtitle / EQ		
 Step	 Pause / Step / Freeze		
 Slow	 Shift + Play /		
 Return	 Back / Return		
 Default	 D.Menu / Top		

