



Original	Recharge
Power	Power
Mute	Mute
Red/Title	Red
Green/Goto	Green
Yellow/Repeat	Yellow
Blue/A-B	Blue
<</Index	<<
>>/Hold	>>
I<</Size	I<<
>>I/Subpage	>>I
Play	Play
Pause	Pause
Stop	Stop
Eject	Eject
Subtitle	Subt
D.Set/Tv/TXT	Text
D.Menu/Cancel	D. Menu

Original	Recharge
D.Sub/Reveal	Media
D.Lan/Nicam/A2	Dual
Tv/Radio	TV/R
FAV	Pre Ch
Nothing	Shift + Back
Sleep	Sleep
Disp	Info
Input	AV
Menu	Menu
Exit	Exit
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
Vol+	Vol +
Vol-	Vol -





Original		Rechange	
EPG	EPG	GUIDE	Guide
CH. L	CH.L	DISC NAV LIST	List
↑ CH	CH+	+ CH	Ch +
↓ CH	CH-	CH -	Ch -
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
-/--	-/--	SHIFT + -/-- GUIDE	Shift + Guide
↺	Recall	RETURN BACK	Back
PICTURE	Picture	PICTURE FORMAT	Format

Original		Rechange	
ASPECT	Aspect	ECO 3D	3D
SOUND	Sound	SHIFT + SOUND DUAL	Shift + Dual

