



Original	Rechange
Standby	Power
Equalizzatore	Shift + Sound / Title
Surround	Shift + Eject / Surround
Eject	Eject / Surround
Audio	Audio / Lang I/II
1	1
2	2
3	3
Angle	Info / Angle
4	4
5	5
6	6
Sottotitoli	Subtitle / EQ
7	7
8	8
9	9
Ricerca	Red / Netflix / Search

Original	Rechange
Canc	Exit / Cancel / Clear
0/10	0
10+	Guide / EPG / -/-
Titolo	Sound / Title
Up	Up
Menu	Menu / Home
Left	Left
OK	OK
Right	Right
Programm	TV/Radio /
Down	Down
Display	Display / Media
PAL/NTSC	D.Menu / Top
Setup	Setup / OPT /
Digest	Shift + D.Menu / Top Menu
Vol+	Vol+
Mute	Mute / Dimmer





Original	Rechange	Original	Rechange
Mark	Fav / Marker / PC		
Zoom	Zoom / Size		
Vol-	Vol-		
A-B	Yellow / YouTube / Repeat		
Ripeti	Back / Return		
Slow	Shift + Play /		
<</F.RWD	<< / Tune-		
F.FWD/>>	>> / Tune+		
I<< / Skip-	I<< / Preset-		
>>I / Skip+	>>I / Preset+		
Stop	Stop / Hold		
Pause/Step	Pause / Step / Freeze		
Play	Play / Slow		

Original	Rechange

