














 
 




Original	Recharge	Original	Recharge
 Power STB	 Power	 Left	 Left
 <<	 <<	 OK	 Ok
 Play	 Play	 Right	 Right
 Pause	 Pause	 Down	 Down
 >>	 >>	 Back	 Back
 <	 <<	 Guide	 Guide
 >	 >>	 X	 Exit
 Stop	 Stop	 Vol+	 Vol +
 Rec	 Rec	 Vol-	 Vol -
 Red	 A Red	 ↑	 Shift + Up
 Green	 B Green	 ↓	 Shift + Down
 Yellow	 C Yellow	 CH+	 Ch +
 Blue	 D Blue	 CH-	 Ch -
 Video	 PICTURE FORMAT Format	 Mute	 Mute
 Menu	 TOP MENU MENU Menu	 P < P	 Pre Ch
 i	 DISPLAY INFO Info	 1	 1
 Up	 Up	 2	 2



 








 
 
 




 




 

 






 




Original		Recharge		Original		Recharge	
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Text		Text				
	Titles		Subt				







Original	Recharge	
PWR On/Off		Power
Epg		Guide
Subt.List		Subt
Opt?		Options
App		Media
Sleep Timer		Sleep
TV		TV/R
Text		Text
Zoom		Eject
Menu		Menu
Menu Up		Up
Menu Left		Left
OK Enter		Ok
Menu Right		Right
Menu Down		Down
Back		Back
CH/Page+		Ch +

Original	Recharge	
Audio		Dual
CH/Page-		Ch -
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
0/10		0
FAV Pref.		Pre Ch
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue






 

 
 

 


 


 
 




 




 
 

 
 






Original	Recharge	Original	Recharge
Freeze		Stop	
H/V Play		Play	
East		>>I	
Lang./Rewind		<<	
LNB F.Forward		>>	
Dec/Pause		Pause	





Original	Recharge	Original	Recharge
PWR On/Off		CH/Page+	 Ch +
Mute		Volume-	 Vol -
Opt?		Audio	 Dual
App		CH/Page-	 Ch -
Subt.List		1. ?	 1
Info		2abc	 2
Video		3def	 3
Zoom		4ghi	 4
Menu		5jkl	 5
Menu Up		6mno	 6
Menu Left		7pqrm	 7
OK Enter		8tuv	 8
Menu Right		9wxyz	 9
Exit		Guide Pilote	 Guide
Menu Down		0/10	 0
Back		FAV Pref.	 Pre Ch
Volume+		Red	 Red





Original	Recharge	Original	Recharge
Green	 B	Green	
Yellow	 C	Yellow	
Blue	 D	Blue	
Dev	 LIST	List	
West	 I<<	I<<	
Dec/Pause	 II	Pause	
	 SHIFT + 	Shift + Ch +	
	 SHIFT + 	Shift + Ch -	
Freeze	 ■	Stop	
East	 >>I	>>I	
LNB F.Forward	 >>	>>	
Lang./Rewind	 <<	<<	
H/V Play	 ▶	Play	

