 
 









 

 

 



 

 










Original		Rechange		Original		Rechange	
	Power		Power		Remain		Smart
	DVD		Blue		Cancel		Media
	Tuner		Green		I<<		I<<
	USB		Yellow		>>I		>>I
	AUX		Red		<<		<<
	Open/Close		Eject		>>		>>
	Sleep		Sleep		Stop		Stop
	1		1		Play		Play
	2		2		Pause		Pause
	3		3		Step		Options
	4		4		Repeat		Text
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		Mute		Mute
	8		8		Tuning Up		Ch +
	9		9		Tuning Down		Ch -
	0		0		Menu		Menu





Original		Recharge		Original		Recharge	
	Return		Back				
	Up / Preset Up		Up				
	Down / Preset		Down				
	Right / Seek Up		Right				
	Left / Seek Down		Left				
	Enter		Ok				
	Audio		List				
	Subtitle		Subt				
	Info		Info				
	Exit		Exit				
	Virtual Sound		Dual				
	EQ		3D				
	Zoom/Mo/ST		Shift + Eject				
	Angle/Autoscan		Guide				

