
 
 

 

 
 





 
 





 
 

 


 




Original		Recharge		Original		Recharge	
	On/Off		Power		Sound		Dual
	Mute		Mute		Source		AV
	1		1		CH+		Ch +
	2		2		CH-		Ch -
	3		3		Menu		Menu
	4		4		Exit		Exit
	5		5		Back		Back
	6		6		FAV		Shift + Pre Ch
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	Tv Guide		Guide		OK		Ok
	Recall		Pre Ch		Info		Info
	Vol+		Vol +		Text		Text
	Vol-		Vol -		Subtitle		Subt
	Picture		Format		TV		TV/R





Original		Recharge		Original		Recharge	
	You Tube		Media				
	Netflix		Shift + Media				
	Smart		Smart				
	Rec/DVD Menu		Rec				
	I<<		I<<				
	>>I		>>I				
	Stop		Stop				
	Rec List/DVD		List				
	<<		<<				
	>>		>>				
	Play		Play				
	Pause		Pause				
	Red/Goto		Red				
	Green/A-B		Green				
	Yellow/Angle		Yellow				
	Blue/Repeat		Blue				

