 














 


 

 
 

 



 

 
 
 
 
 




 
 
 

 


 

 

 

 

 

 
 
 







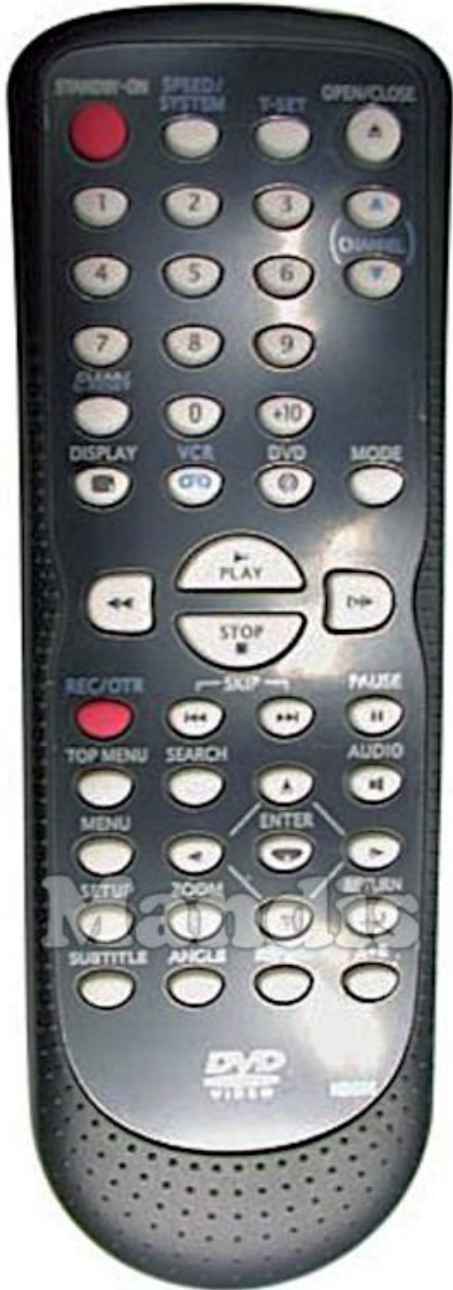 




Original	Rechange	Original	Rechange
 Standby-On	 Power	 Speed / System	 3D
 Channel+	 Ch +	 DVD	 Smart
 Channel-	 Ch -	 T-Set	 AV
 Open / Close	 Eject	 VCR	 Media
 1	 1	 Play	 Play
 2	 2	 <<	 <<
 3	 3	 >>	 >>
 4	 4	 Stop	 Stop
 5	 5	 Rec / OTR	 Rec
 6	 6	 I<< Skip	 I<<
 7	 7	 Skip >>I	 >>I
 8	 8	 Pause	 Pause
 9	 9	 Top Menu	 D. Menu
 0	 0	 Mode	 List
 +10	 Guide	 Search	 TV/R
 Clear / C.Reset	 Exit	 Up	 Up
 Display	 Info	 Left	 Left





Original	Rechange
Enter	Ok
Right	Right
Down	Down
Audio	Dual
Menu	Menu
Setup	Options
Zoom	Shift + Eject
Return	Back
Subtitle	Subt
Angle	Format
Repeat	Text
A-B	Shift + Text

Original	Rechange

