



 
 

 

 

 

 

 

 
 
 
 






 


 





Original		Rechange	
	Standby		Power
	Eject		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-- +10	 + 	Shift + Guide
	Recall		Back
	V+		Vol +
	V-		Vol -
	Title / Lang		Dual

Original		Rechange	
	EPG / D.Disp		Guide
	P+		Ch +
	P-		Ch -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	LCD Menu		Menu
	Picture Format / DVD Setup		Format
	Picture Format / DVD Setup		Options
	Source		AV
	PMode	 + 	Shift + Format
	SMode	 + 	Shift + Dual
	Mute		Mute
	Play / Pause		Play
	Play / Pause		Pause





Original		Rechange		Original		Rechange	
	Exit / Stop		Exit		Red / Program		Red
	Exit / Stop		Stop		Red / Program		Shift + 1
	Sleep		Sleep		Green / Menu		Green
	Nicam Audio		List		Green / Menu		D. Menu
	Text / <<		Text		Yellow / Repeat		Yellow
	Text / <<		<<		Yellow / Repeat		Shift + Text
	FAV Hold / >>		Pre Ch		Blue / AB		Blue
	FAV Hold / >>		>>				
	FAV- / Goto		Media				
	Fav+ / Angle		Smart				
	Index / I<<		Info				
	Index / I<<		I<<				
	Size / >>I		3D				
	Size / >>I		>>I				
	Reveal / Zoom		TV/R				
	Reveal / Zoom		Shift + Eject				
	Subpage /		Subt				



Subtitle