




 





 

 



 











 











 







 



 



 
 
 

 










Original	Rechange	Original	Rechange
 Power	 Power	 Display	 Info
 VCR/DVD	 Media	 On Screen/Progressiv	 3D
 DVD Timer	 Green	 Top	 Shift + Menu
 VCR Timer	 Red	 Menu	 Menu
 1	 1	 Set Up	 Options
 2	 2	 Return	 Back
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 Enter	 Ok
 8	 8	 I<</Previous	 I<<
 9	 9	 >>I/Next	 >>I
 0/AUX	 0	 <</Slow-	 <<
 X/Cancel	 Exit	 Play/Select	 Play
 Showview/Video Plus+	 Guide	 >>/Slow+	 >>
 Prog/Check	 Sleep	 Stop/Clear	 Stop

Original	Rechange	Original	Rechange
 Power	 Power	 Display	 Info
 VCR/DVD	 Media	 On Screen/Progressiv	 3D
 DVD Timer	 Green	 Top	 Shift + Menu
 VCR Timer	 Red	 Menu	 Menu
 1	 1	 Set Up	 Options
 2	 2	 Return	 Back
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 Enter	 Ok
 8	 8	 I<</Previous	 I<<
 9	 9	 >>I/Next	 >>I
 0/AUX	 0	 <</Slow-	 <<
 X/Cancel	 Exit	 Play/Select	 Play
 Showview/Video Plus+	 Guide	 >>/Slow+	 >>
 Prog/Check	 Sleep	 Stop/Clear	 Stop





Original		Rechange	
	Pause		Pause
	Rec		Rec
	Remain/Rec	+	Shift + Rec
	↔		Pre Ch
	→		Blue
	Angle/Live Check		AV
	Subtitle		Subt
	TV/DVD-TV/VCR		TV/R
	Mute/Audio		Mute
	PR+		Ch +
	PR- TV/CBL/DVD		Ch -
	Vol+ Tv		Vol +
	Vol- Tv		Vol -

Original		Rechange	








Original		Rechange		Original		Rechange	
	Power		Power		Prog/Check		Sleep
	VCR/DVD		Media		Display		Info
	DVD Timer		Green		On Screen/Progressiv		3D
	VCR Timer		Red		Top		Shift + Menu
	1		1		Menu		Menu
	2		2		Set Up		Options
	3		3		Return		Back
	4		4		Up		Up
	5		5		Down		Down
	6		6		Right		Right
	7		7		Left		Left
	8		8		Enter		Ok
	9		9		I<</Previous		I<<
	0/AUX		0		>>/Next		>>I
	X/Cancel		Exit		<</Slow-		<<
	Memory/Mark		Smart		Play Select		Play
	Showview/Video Plus+		Guide		>>/Slow+		>>






 







 



 











 








 
 









 



 







 



 






Original		Recharge		Original	Recharge
	Stop/Clear		Stop		
	Pause		Pause		
	Rec		Rec		
	Remain/Rec		Shift + Rec		
	↔		Pre Ch		
	→		Blue		
	Angle/Live Check		AV		
	Subtitle		Subt		
	TV/DVD-TV/VCR		TV/R		
	Mute/Audio		Mute		
	PR+		Ch +		
	PR- TV/CBL/DVD		Ch -		
	Vol+ Tv		Vol +		
	Vol- Tv		Vol -		





Original	Recharge	Original	Recharge
 Power	 Power	 Menu	 Menu
 VCR/DVD	 Media	 Up	 Up
 DVD Timer	 Green	 Down	 Down
 VCR Timer	 Red	 Right	 Right
 1	 1	 Left	 Left
 2	 2	 Enter	 Ok
 3	 3	 I<</Previous	 I<<
 4	 4	 >>/Next	 >>I
 5	 5	 <</Slow-	 <<
 6	 6	 Play/Select	 Play
 7	 7	 >>/Slow+	 >>
 8	 8	 Stop/Clear	 Stop
 9	 9	 Pause	 Pause
 0/AUX	 0	 Rec	 Rec
 Prog/Check	 Sleep	 Remain/Rec	 Shift + Rec
 Display	 Info	 ↔	 Pre Ch
 Top	 Shift + Menu	 →	 Blue

Original	Recharge	Original	Recharge
 Menu	 Menu	 Up	 Up
 Down	 Down	 Right	 Right
 Left	 Left	 Enter	 Ok
 I<</Previous	 I<<	 >>/Next	 >>I
 <</Slow-	 <<	 Play/Select	 Play
 >>/Slow+	 >>	 Stop/Clear	 Stop
 Pause	 Pause	 Rec	 Rec
 Remain/Rec	 Shift + Rec	 ↔	 Pre Ch
 →	 Blue		



