



Original	Rechange	Original	Rechange
Power	Power	Group/Title Skip >>I	Ch +
Sleep/A.Stby	Sleep	Stop/PTY	Stop
Clock/Timer	AV	Repeat	Text
Scan Mode	Green	Top Menu/PG	Shift + Menu
Display	Info	Menu/PL	Menu
Picture/Adjust	Format	Tuner/Play	3D
Dimmer	Smart	Vol+	Vol +
Play/Pause	Play	Vol-	Vol -
Play/Pause USB	Pause	Fade Muting	Mute
Play/Pause SD	Media	Return	Shift + Pre Ch
Tuner	TV/R	Return	Back
Audio In	Dual	On Screen	Shift + Info
<</Slow-	<<	Set Up	Options
>>/Slow+	>>	Up	Up
I<<	I<<	Down	Down
I<< Group/Title Skip	Ch -	Right	Right
>>I	>>I	Enter/Set	Ok





Original	Rechange
Left	Left
AUDIO/MPX	Red
SUBTITLE	Subt
ZOOM	Eject
SOUND MODE	List
SURROUND	Shift + Dual
C.VOICE	Yellow
S.TURBO II	Blue
HBS	Shift + Smart
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Original	Rechange
9	9
0	0
10	Guide
+10	Pre Ch
Angle	Shift + 5
Time Search	Shift + 6
DVD Level	Shift + 7
Audio In Level	Shift + 8
Repeat A-B	Shift + Text
Resume	D. Menu
Cancel	Exit
File Type	Shift + Media

