




 

 

 



 





 




 
 





 

 

 

 

 



 
 



 




 
 
 

 


 











Original		Rechange		Original		Rechange	
	Power		Power		Vol +		Vol +
	TV		Red		Vol -		Vol -
	DISC		Green		Up		Up
	TUNER		Yellow		Left		Left
	AUX		Blue		OK		Ok
	1		1		Right		Right
	2		2		Down		Down
	3		3		I<<		I<<
	4		4		>>I		>>I
	5		5		Stop		Stop
	6		6		Play		Play
	7		7		Pause		Pause
	8		8		I<<		<<
	9		9		>>I		>>
	0		0		Subtitle		Subt
	Disc Menu		D. Menu		Angle		Smart
	OSD Menu		Menu		Zoom		Eject



