







 

















 











Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 Picture	 Picture / Format
 Aspect	 Shift + Picture / Format
 Sleep	 Sleep / Timer
 Sound	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0

Original	Recharge
 Recall	 Back / Return
 Display	 Display / Media
 Up	 Up
 Input	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 EPG	 Guide / EPG / -/-
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Tv/Radio	 TV/Radio /
 CH-	 CH- / Page-
 Open/Close	 Eject / Surround





Original		Recharge	
	Subtitle		Subtitle / EQ
	CH List		Smart / List
	Rec		Rec / Rec Mode
	Rec List		D.Menu / Top
	Tv/TXT/D.Pro		Text / Goto
	Cancel/D.Rep	+	Shift + Exit / Cancel / Clear
	Reveal/D.Goto		Setup / OPT /
	Nicam/D.Slow		Audio / Lang I/II
	I<</Index		I<< / Preset-
	>>I/Hold		>>I / Preset+
	Size/D.Zoom		Zoom / Size
	Subpage/D.Title		Info / Angle
	<<		<< / Tune-
	>>		>> / Tune+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold

Original		Recharge	
	Red/D.Set		Red / Netflix / Search
	Green/D.Menu		Green / APP / Repeat
	Yellow/D.Sub		Yellow / YouTube / Repeat
	Blue/D.Lan		Blue / Prime Video / Random

