











 


 
 
 

 
 
 
 
 
 
 
 
 
 
 


 
 
 

 



 
 











 



 
 
 


 






 

 
 





Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol -
	Source		AV		P+		Ch +
	1		1		P-		Ch -
	2		2		Menu		Menu
	3		3		Home		Smart
	4		4		Content		TV/R
	5		5		Tools		Options
	6		6		Info		Info
	7		7		Return		Back
	8		8		Exit		Exit
	9		9		Up		Up
	0		0		Down		Down
	TTX/MIX		Text		Left		Left
	Guide		Guide		Right		Right
	Mute		Mute		Enter		Ok
	CH List		List		Red		Red
	Vol+		Vol +		Green		Green





Original		Recharge		Original		Recharge	
	Yellow		Yellow				
	Blue		Blue				
	Alarm		Media				
	3D		3D				
	Subt.		Subt				
	Stop		Stop				
	<<		<<				
	I<<		I<<				
	Play		Play				
	Pause		Pause				
	>>		>>				
	>>I		>>I				

