
 


 





 







 



 

 

 

 

 





 









 







 

 

 

 



 
 

 
 

 









Original	Rechange
 Source	 AV / Input / RDS
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 EPG	 Guide / EPG / -/--
 0	 0
 PRE PR	 Back / Return
 DTV/ATV	 Setup / OPT /
 PR List	 Smart / List
 ECO	 Fav / Marker / PC

Original	Rechange
 [i+]	 Info / Angle
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+
 Vol-	 Vol-
 [<>]	 Picture / Format
 PR-	 CH- / Page-
 Dual	 Audio / Lang I/II
 AJD Audio	 Sound / Title
 ADJ Video	 D.Menu / Top
 Sleep	 Sleep / Timer
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down





Original	Recharge
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Teletext	 Text / Goto
 Subtitle	 Subtitle / EQ
 Size	 Zoom / Size
 Subpage	 Eject / Surround
 Index	 Display / Media
 Hold	 +  Shift + Stop /
 Reveal	 TV/Radio /
 Freeze	 Pause / Step / Freeze
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 Play/Pause	 Play / Slow
>>I	>>I / Preset+

Original	Recharge

