



	Original	Recharge
EJECT	Eject	Eject / Surround
TV I/0	Power Tv	+ Shift + Power
I/0	Power	Power
1	1	1
2	2	2
3	3	3
VOL	Vol+	Vol+
4	4	4
5	5	5
6	6	6
VOL	Vol-	Vol-
7	7	7
8	8	8
9	9	9
TV/VIDEO	Tv/Video	TV/Radio /
CLEAR	Clear	Exit / Cancel / Clear
0	0	0

	Original	Recharge
ENTER	Enter	AV / Input / RDS
PICTURE MODE	Picture Mode	Picture / Format
AUDIO	Audio	Audio / Lang I/II
SUBTITLE	Subtitle	Subtitle / EQ
ANGLE	Angle	Info / Angle
SUR	Sur	+ Shift + Eject / Surround
PREV	I<</Prev	I<< / Preset-
NEXT	>>I/Next	>>I / Preset+
REPEAT	Repeat	Green / APP / Repeat
TIME/TEXT	Time/Text	Text / Goto
SCAN/SLOW	<< Scan/Slow	<< / Tune-
/SLOW	Scan/Slow >>	>> / Tune+
SEARCH MODE	Search Mode	Red / Netflix / Search
REPLAY	Replay	Zoom / Size
PLAY	Play	Play / Slow
PAUSE	Pause	Pause / Step / Freeze
STOP	Stop	Stop / Hold



