













 





 

 

 

 

 

 



 

 



 

 

 

 

 

 

 

 

 





 









**Originalfernbedienung    Ersatzfernbedienung**

	POWER		Power
	INFO		Info / Angle
	MUTE		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	SOURCE		AV / Input / RDS
	0		0
	AUDIO		Audio / Lang I/II
	FORMAT		Picture / Format
	BACK		Back / Return

**Originalfernbedienung    Ersatzfernbedienung**

	MENU		Menu / Home
	EXIT		Exit / Cancel / Clear
	UP		Up
	LEFT		Left
	ENTER		OK
	RIGHT		Right
	VOL+		Vol+
	DOWN		Down
	CH+		CH+ / Page+
	VOL-		Vol-
	CH-		CH- / Page-
	LIST		Smart / List
	SLEEP		Sleep / Timer
	EPG		Guide / EPG / -/-
	FAV		Fav / Marker / PC
	<<		<< / Tune-
	RED		Red / Netflix / Search





Originalfernbedienung    Ersatzfernbedienung

	>>		>> / Tune+
	GREEN		Green / APP / Repeat
	I<<		I<< / Preset-
	YELLOW		Yellow / YouTube / Repeat
	BLUE		Blue / Prime Video / Random
	>>I		>>I / Preset+
	PLAY		Play / Slow
	PAUSE		Pause / Step / Freeze
	TEXT		Text / Goto
	STOP		Stop / Hold
	SUBTITLE		Subtitle / EQ
	RADIO		TV/Radio /
	OPT		Setup / OPT /
	DMP		Display / Media
	INDEX		D.Menu / Top
	REC		Rec / Rec Mode

Originalfernbedienung    Ersatzfernbedienung