


 







 



 

 



 

 





 




 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	CH.List		Smart / List
	0		0
	Recall		Back / Return
	Vol+		Vol+
	PIC.Mode		Picture / Format
	S.Mode		Sound / Title

Originalfernbedienung Ersatzfernbedienung

	CH+		CH+ / Page+
	Vol-		Vol-
	Source		AV / Input / RDS
	CH-		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Menu		Menu / Home
	Rec		Rec / Rec Mode
	Timeshift		Shift + Pause / Step /
	Timer		Shift + Sleep / Timer
	Rec.List		Shift + Smart / List
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat



