



Originalfernbedienung Ersatzfernbedienung

|   |           |   |                               |
|---|-----------|---|-------------------------------|
|    | Power     |    | Power                         |
|    | Mute      |    | Mute / Dimmer                 |
|    | Red       |    | Red / Netflix / Search        |
|    | Green     |    | Green / APP / Repeat          |
|    | Yellow    |    | Yellow / YouTube / Repeat     |
|    | Blue      |    | Blue / Prime Video / Random   |
|    | <</[≡o]   |    | << / Tune-                    |
|    | >>/[≡?]   |    | >> / Tune+                    |
|    | I<</[≡+]  |    | I<< / Preset-                 |
|    | >>I/[≡..] |    | >>I / Preset+                 |
|   | Play      |   | Play / Slow                   |
|  | Pause     |  | Pause / Step / Freeze         |
|  | Stop      |  | Stop / Hold                   |
|  | [≡i]      |  | Smart / List                  |
|  | Text      |  | Text / Goto                   |
|  | Subtitle  |  | Subtitle / EQ                 |
|  | Freeze    |  | Shift + Pause / Step / Freeze |

Originalfernbedienung Ersatzfernbedienung

|   |            |   |                       |
|---|------------|---|-----------------------|
|    | Info       |    | Info / Angle          |
|    | [   ]/Menu |    | Menu / Home           |
|    | Up         |    | Up                    |
|    | Source     |    | AV / Input / RDS      |
|    | Left       |    | Left                  |
|    | OK         |    | OK                    |
|    | Right      |    | Right                 |
|    | Down       |    | Down                  |
|    | EPG        |    | Guide / EPG / -/-     |
|    | Exit       |    | Exit / Cancel / Clear |
|    | Vol+       |    | Vol+                  |
|  | FAV        |  | Fav / Marker / PC     |
|  | CH+        |  | CH+ / Page+           |
|  | Vol-       |  | Vol-                  |
|  | REP/Rec    |  | Rec / Rec Mode        |
|  | CH-        |  | CH- / Page-           |
|  | 1          |  | 1                     |





Originalfernbedienung Ersatzfernbedienung

|        |        |                    |                   |
|--------|--------|--------------------|-------------------|
| 2      | 2      | DVD<br>2           | 2                 |
| 3      | 3      | CD - STB<br>3      | 3                 |
| 4      | 4      | VIDEO<br>4         | 4                 |
| 5      | 5      | TAPE<br>5          | 5                 |
| 6      | 6      | TUNER<br>6         | 6                 |
| 7      | 7      | AUX - HDD<br>7     | 7                 |
| 8      | 8      | USB<br>8           | 8                 |
| 9      | 9      | BLUETOOTH<br>9     | 9                 |
| AUDIO  | Audio  | LANG I/II<br>AUDIO | Audio / Lang I/II |
| 0      | 0      | HDMI - BAT<br>0    | 0                 |
| RECALL | Recall | RETURN<br>BACK     | Back / Return     |
|        |        |                    |                   |
|        |        |                    |                   |
|        |        |                    |                   |
|        |        |                    |                   |
|        |        |                    |                   |
|        |        |                    |                   |
|        |        |                    |                   |
|        |        |                    |                   |
|        |        |                    |                   |








Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |








Originalfernbedienung Ersatzfernbedienung

|           |   |                       |
|-----------|---|-----------------------|
| Power     |    | Power                 |
| Mute      |    | Mute / Dimmer         |
| Play      |    | Play / Slow           |
| Pause     |    | Pause / Step / Freeze |
| Stop      |    | Stop / Hold           |
| Rec       |    | Rec / Rec Mode        |
| <</Hold   |    | << / Tune-            |
| >>/Index  |    | >> / Tune+            |
| I<<       |    | I<< / Preset-         |
| >>I       |    | >>I / Preset+         |
| Nicam/A2  |  | Audio / Lang I/II     |
| Subtitle  |  | Subtitle / EQ         |
| Subpage   |  | Eject / Surround      |
| Size      |  | Zoom / Size           |
| Sleep     |  | Sleep / Timer         |
| DTV/Radio |  | TV/Radio /            |
| Reveal    |  | D.Menu / Top          |

Originalfernbedienung Ersatzfernbedienung

|         |   |                       |
|---------|---|-----------------------|
| TXT/MIX |    | Text / Goto           |
| Menu    |    | Menu / Home           |
| Up      |    | Up                    |
| Info    |    | Info / Angle          |
| Left    |    | Left                  |
| Enter   |    | OK                    |
| Right   |    | Right                 |
| Cancel  |    | Exit / Cancel / Clear |
| Down    |    | Down                  |
| Back    |    | Back / Return         |
| Vol+    |  | Vol+                  |
| List    |  | Smart / List          |
| CH+     |  | CH+ / Page+           |
| Vol-    |  | Vol-                  |
| Mode    |  | Display / Media       |
| CH-     |  | CH- / Page-           |
| 1       |  | 1                     |





Originalfernbedienung    Ersatzfernbedienung

|         |  |                             |
|---------|--|-----------------------------|
| 2       |  | 2                           |
| 3       |  | 3                           |
| 4       |  | 4                           |
| 5       |  | 5                           |
| 6       |  | 6                           |
| 7       |  | 7                           |
| 8       |  | 8                           |
| 9       |  | 9                           |
| EPG     |  | Guide / EPG / -/--          |
| 0       |  | 0                           |
| FAV     |  | Fav / Marker / PC           |
| Red     |  | Red / Netflix / Search      |
| Green   |  | Green / APP / Repeat        |
| Yellow  |  | Yellow / YouTube / Repeat   |
| Blue    |  | Blue / Prime Video / Random |
| <</Hold |  | Shift + Stop /              |
| FAV-    |  | Shift + Left                |

Originalfernbedienung    Ersatzfernbedienung

|      |  |                            |
|------|--|----------------------------|
| FAV+ |  | Shift + Right              |
| -/-- |  | Shift + Guide / EPG / -/-- |
|      |  |                            |
|      |  |                            |
|      |  |                            |
|      |  |                            |
|      |  |                            |
|      |  |                            |
|      |  |                            |
|      |  |                            |
|      |  |                            |
|      |  |                            |
|      |  |                            |
|      |  |                            |
|      |  |                            |
|      |  |                            |
|      |  |                            |
|      |  |                            |
|      |  |                            |
|      |  |                            |






 













Originalfernbedienung Ersatzfernbedienung

|            |   |                       |
|------------|---|-----------------------|
| Power      |    | Power                 |
| Mute       |    | Mute / Dimmer         |
| Play       |    | Play / Slow           |
| Pause      |    | Pause / Step / Freeze |
| Stop       |    | Stop / Hold           |
| Rec        |    | Rec / Rec Mode        |
| <</[Timer] |    | << / Tune-            |
| >>/[≡?]    |    | >> / Tune+            |
| I<</[≡⇅]   |    | I<< / Preset-         |
| >>I/[≡...] |   | >>I / Preset+         |
| Audio      |  | Audio / Lang I/II     |
| Subtitle   |  | Subtitle / EQ         |
| I<</[≡⇅]   |  | Zoom / Size           |
| <</[Timer] |  | Sleep / Timer         |
| Text       |  | Text / Goto           |
| Source/Av  |  | AV / Input / RDS      |
| [II]       |  | Menu / Home           |

Originalfernbedienung Ersatzfernbedienung

|        |   |                       |
|--------|---|-----------------------|
| Up     |    | Up                    |
| Info   |    | Info / Angle          |
| Left   |    | Left                  |
| Ok     |    | OK                    |
| Right  |    | Right                 |
| Exit   |    | Exit / Cancel / Clear |
| Down   |    | Down                  |
| Recall |    | Back / Return         |
| Vol+   |    | Vol+                  |
| [≡i]   |   | Smart / List          |
| Ch+    |  | CH+ / Page+           |
| Vol-   |  | Vol-                  |
| Ch-    |  | CH- / Page-           |
| 1      |  | 1                     |
| 2      |  | 2                     |
| 3      |  | 3                     |
| 4      |  | 4                     |





Originalfernbedienung   Ersatzfernbedienung   Originalfernbedienung   Ersatzfernbedienung

|        |                             |   |  |
|--------|-----------------------------|---|--|
| 5      |                             | 5 |  |
| 6      |                             | 6 |  |
| 7      |                             | 7 |  |
| 8      |                             | 8 |  |
| 9      |                             | 9 |  |
| Epg    | Guide / EPG / -/--          |   |  |
| 0      |                             | 0 |  |
| Fav    | Fav / Marker / PC           |   |  |
| Red    | Red / Netflix / Search      |   |  |
| Green  | Green / APP / Repeat        |   |  |
| Yellow | Yellow / YouTube / Repeat   |   |  |
| Blue   | Blue / Prime Video / Random |   |  |
| Freeze | Shift + Pause / Step /      |   |  |
|        |                             |   |  |
|        |                             |   |  |
|        |                             |   |  |
|        |                             |   |  |
|        |                             |   |  |
|        |                             |   |  |
|        |                             |   |  |
|        |                             |   |  |
|        |                             |   |  |
|        |                             |   |  |
|        |                             |   |  |

