



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|------------------------|
|  | POWER |  | Power |
|  | INFO |  | Info / Angle |
|  | HDMI CONTROL |  | Smart / List |
|  | SLEEP |  | Sleep / Timer |
|  | SCREEN |  | Picture / Format |
|  | SOURCE |  | AV / Input / RDS |
|  | PRESETS |  | Setup / OPT / |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | ZOOM/RED/▲ |  | Zoom / Size |
|  | ZOOM/RED/▲ |  | Shift + CH+ / |
|  | ZOOM/RED/▲ |  | Red / Netflix / Search |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | REPEAT/GREEN/▼ |  | Shift + CH- / |

Page-

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|-----------------------------|
|  | REPEAT/GREEN/▼ |  | Green / APP / Repeat |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | ROOT/YELLOW |  | Yellow / YouTube / Repeat |
|  | RETURN |  | Back / Return |
|  | 0 |  | 0 |
|  | MENU |  | Menu / Home |
|  | TITLE/BUE |  | Sound / Title |
|  | TITLE/BUE |  | Blue / Prime Video / Random |
|  | UP |  | Up |
|  | LEFT |  | Left |
|  | OK/SELECT |  | OK |
|  | RIGHT |  | Right |
|  | DOWN |  | Down |
|  | P+ |  | CH+ / Page+ |
|  | P- |  | CH- / Page- |



