 


 





 

 
 

 
 
 



 
 
 

 

 
 
 

 











 







 





















Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Search		SRC
	<x]		P/C / FAV
	Red		Red (A)
	Green		Green (B)
	Yellow		Yellow (C)
	Blue		Blue (D)
	←		BACK
	Menu		MENU
	Exit		EXIT
	Text		TEXT
	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	OK		OK
	Mute		MUTE
	Info		INFO
	Guide		-/-- / EPG
	Vol+		VOL +
	Vol-		VOL -
	CH+		CH +
	CH-		CH -
	R		Rec



