 






 
 

 

 


 






 




 



 





**Originalfernbedienung    Ersatzfernbedienung**

|   |         |   |                         |
|---|---------|---|-------------------------|
|    | POWER   |    | Power                   |
|    | ←○      |    | Shift + Smart / List    |
|    | **/Ö    |    | Shift + Display / Media |
|    | *²/♀    |    | Shift + Red / Netflix / |
|    | SOURCE  |    | AV / Input / RDS        |
|    | PRESETS |    | Smart / List            |
|    | ≡≡≡     |    | Setup / OPT /           |
|    | ♪/☺/■   |    | Display / Media         |
|    | SLEEP   |    | Sleep / Timer           |
|    | 1 . /@  |    | 1                       |
|   | 2 abc   |   | 2                       |
|  | 3 def   |  | 3                       |
|  | 4 ghi   |  | 4                       |
|  | 5 jkl   |  | 5                       |
|  | 6 mno   |  | 6                       |
|  | 7 pqrs  |  | 7                       |
|  | 8 tuv   |  | 8                       |

**Originalfernbedienung    Ersatzfernbedienung**

|   |          |   |                       |
|---|----------|---|-----------------------|
|    | 9 wxyz   |    | 9                     |
|    | TV       |    | TV/Radio /            |
|    | 0        |    | 0                     |
|    | ↔        |    | Shift + Back / Return |
|    | TV GUIDE |    | Guide / EPG / -/-     |
|    | [≡]      |    | Text / Goto           |
|    | MENU     |    | Menu / Home           |
|    | Q.MENU   |    | D.Menu / Top          |
|    | UP       |    | Up                    |
|    | LEFT     |    | Left                  |
|   | OK       |   | OK                    |
|  | RIGHT    |  | Right                 |
|  | DOWN     |  | Down                  |
|  | BACK     |  | Back / Return         |
|  | →□←      |  | Picture / Format      |
|  | EXIT     |  | Exit / Cancel / Clear |
|  | *FAV     |  | Fav / Marker / PC     |



