


**Originalfernbedienung    Ersatzfernbedienung**

	POWER		Power
	←○		Shift + Smart / List
	**/Ö		Shift + Display / Media
	*²/♀		Shift + Red / Netflix /
	SOURCE		AV / Input / RDS
	PRESETS		Smart / List
	≡≡≡		Setup / OPT /
	♪/☺/□		Display / Media
	SLEEP		Sleep / Timer
	1 . /@		1
	2 abc		2
	3 def		3
	4 ghi		4
	5 jkl		5
	6 mno		6
	7 pqrs		7
	8 tuv		8

**Originalfernbedienung    Ersatzfernbedienung**

	9 wxyz		9
	TV		TV/Radio /
	0		0
	↔		Shift + Back / Return
	TV GUIDE		Guide / EPG / -/-
	[≡]		Text / Goto
	MENU		Menu / Home
	Q.MENU		D.Menu / Top
	UP		Up
	LEFT		Left
	OK		OK
	RIGHT		Right
	DOWN		Down
	BACK		Back / Return
	→□←		Picture / Format
	EXIT		Exit / Cancel / Clear
	*FAV		Fav / Marker / PC





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	VOL+		Vol+		BLUE		Blue / Prime Video / Random
	MUTE		Mute / Dimmer				
	P+		CH+ / Page+				
	VOL-		Vol-				
	INFO		Info / Angle				
	P-		CH- / Page-				
	REC		Rec / Rec Mode				
	PLAY		Play / Slow				
	PAUSE		Pause / Step / Freeze				
	STOP		Stop / Hold				
	LANG.		Audio / Lang I/II				
	<<		<< / Tune-				
	>>		>> / Tune+				
	[≡]...		Sound / Title				
	RED		Red / Netflix / Search				
	GREEN		Green / APP / Repeat				
	YELLOW		Yellow / YouTube / Repeat				

