




























 






**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Source		AV / Input / RDS
	Sleep		Sleep / Timer
	Picture Mode		Picture / Format
	Sound Mode		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV+		Shift + Up
	0		0
	FAV-		Shift + Down

**Originalfernbedienung    Ersatzfernbedienung**

	Exit		Exit / Cancel / Clear
	Up		Up
	FAV		Fav / Marker / PC
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	EPG		Guide / EPG / -/--
	Vol+		Vol+
	Audio		Audio / Lang I/II
	P+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat



