
























Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Menu		Menu / Home
	P<P		Smart / List
	Up		Up
	Left		Left
	Ok		OK
	Right		Right
	Down		Down
	AV		AV / Input / RDS
	Tv/R		TV/Radio /
	Info		Info / Angle
	I-II		Audio / Lang I/II
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

	P+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	PP		Back / Return
	0		0
	-/-- Exit		Exit / Cancel / Clear
	-/-- Exit		Shift + Guide / EPG / -/--





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	[≡]/Text		Text / Goto				
	[≡o]		<< / Tune-				
	[≡+]		>> / Tune+				
	[≡x]		<<< / Preset-				
	[.≡]/[*]		>>> / Preset+				
	[≡◆]/[+]/Wide		Picture / Format				
	[≡?]/PC		Fav / Marker / PC				
	[≡i]/Guide		Guide / EPG / -/-				

