


 


 

 


 
 
 

 

 
 
 
 
 
 

 
 








 







 
 






 




 
 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	Sports		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	CH.LIST		List
	Menu		Menu
	Smart HUB		Smart
	Guide		Guide
	Tools		Options
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Return		Back
	Exit		Exit
	Red/A		Red





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Green/B		Green				
	Yellow/C		Yellow				
	Blue/D		Blue				
	E-Manual		Shift + D. Menu				
	Extra		D. Menu				
	Search		TV/R				
	PIC.Size		Format				
	Picture		Shift + Format				
	AD/Subt		Subt				
	<</I<<		<<				
	Pause		Pause				
	>>/>>I		>>				
	Rec		Rec				
	Play		Play				
	Stop		Stop				

