




 
 
 



 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	PRO/TV/TXT		TV/Radio /
	Slow/Cancel		Shift + Play /
	Rep/Reveal		Shift + Back / Return
	TV/AV		AV / Input / RDS
	<</Hold		<< / Tune-
	>>/Size		>> / Tune+
	I<</Subpage		I<< / Preset-
	>>I/Index		>>I / Preset+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	FAV		Fav / Marker / PC
	0		0
	Recall		Back / Return
	Vol+		Vol+
	CH+		CH+ / Page+
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Vol-		Vol-
	Down		Down
	CH-		CH- / Page-
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Nicam/A2		Text / Goto
	Display		Display / Media





Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Picture		Picture / Format
	Sound		Sound / Title
	Sleep		Sleep / Timer
	Subtitle		Subtitle / EQ
	LAN/EPG		Audio / Lang I/II
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Set/CH/List		Setup / OPT /
	D-Menu/List		D.Menu / Top
	Stop		Stop / Hold
	Record		Rec / Rec Mode
	Open/Close		Eject / Surround
	Red/Zoom		Red / Netflix / Search
	Green/Goto		Green / APP / Repeat
	Yellow/Title		Yellow / YouTube / Repeat
	Blue/Angle/Screen		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

