





 



 












 





 








Originalfernbedienung    Ersatzfernbedienung

	Open/Close		Eject / Surround
	Power		Power
	1		1
	2		2
	3		3
	Mute		Mute / Dimmer
	4		4
	5		5
	6		6
	Title/TTX		Sound / Title
	7		7
	8		8
	9		9
	Menu		Menu / Home
	10+		Shift + Guide / EPG / -/-
	0		0
	Goto		Text / Goto

Originalfernbedienung    Ersatzfernbedienung

	FAV		Fav / Marker / PC
	EPG		Guide / EPG / -/-
	Info		Info / Angle
	Vol-		Vol-
	Vol+		Vol+
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	Setup		Setup / OPT /
	Up/CH+		Up
	Up/CH+		Shift + Up
	Return		Back / Return
	Left		Left
	Enter		OK
	Right		Right
	Source		AV / Input / RDS
	Down/CH-		Shift + Down







### Originalfernbedienung Ersatzfernbedienung

	Down/CH-		Down
	Tv/Radio		TV/Radio /
	<</REV		<< / Tune-
	>>/FWD		>> / Tune+
	I<</Prev		I<< / Preset-
	>>I/Next		>>I / Preset+
	PBC		D.Menu / Top
	Subtitle		Subtitle / EQ
	Zoom		Zoom / Size
	Video		Shift + 4
	Program		Shift + TV/Radio / Program
	Language		Audio / Lang I/II
	L/R		Sleep / Timer
	P/N		Picture / Format
	Red/Repeat		Red / Netflix / Search
	Green/A-B		Green / APP / Repeat
	Yellow/Angle		Yellow / YouTube / Repeat

### Originalfernbedienung Ersatzfernbedienung

	Blue/Slow		Blue / Prime Video / Random
---	-----------	---	-----------------------------

