




 



 
















 





 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Portal/Energy Saving		Sleep / Timer
	[]/Ratio		Picture / Format
	Input		AV / Input / RDS
	TV		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Q.View		D.Menu / Top

 
 

 


 







 
 




Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Fav		Fav / Marker / PC
	PR+/Page Up		CH+ / Page+
	Vol-		Vol-
	3D		Zoom / Size
	PR-/Page Down		CH- / Page-
	Mute		Mute / Dimmer
	Settings		Setup / OPT /
	Info/Home		Info / Angle
	Q.Menu/3D		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Guide		Guide / EPG / -/-





Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text		Text / Goto
	T.Opt		Shift + Setup / OPT / Tools
	Subtitle		Subtitle / EQ
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	Simplink		Display / Media
	AD		Audio / Lang I/II
	Rec		Rec / Rec Mode
	My APPS		Shift + Green / APP / Repeat

Originalfernbedienung Ersatzfernbedienung

