



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Lang		Audio / Lang I/II
	Source (Games)		Eject / Surround
	Movie-Music-Phot		Picture / Format
	[≡]..		Zoom / Size
	* / O		Sleep / Timer
	TV		TV/Radio /
	Q.Menu		D.Menu / Top
	[-O-]		Setup / OPT /
	[≡]/Text		Text / Goto

 

 

 





 



 

 









 
 
Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Up		Up
	i		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	World (Violet)		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	* / Q		Display / Media
	PR-		CH- / Page-
	1		1
	2		2





Originalfernbedienung Ersatzfernbedienung

 3 def	3	 3	3
 4 ghi	4	 4	4
 5 jkl	5	 5	5
 6 mno	6	 6	6
 7 pqrs	7	 7	7
 8 tuv	8	 8	8
 9 wxyz	9	 9	9
 TV	Guide	 GUIDE EPG	Guide / EPG / -/-
 0	0	 0	0
 Red	Red	 NETFLIX SEARCH	Red / Netflix / Search
 Green	Green	 APP REPEAT	Green / APP / Repeat
 Yellow	Yellow	 YouTube REPEAT A-B	Yellow / YouTube / Repeat
 Blue	Blue	 Prime Video RANDOM	Blue / Prime Video / Random
 Recall	Recall	 SHIFT + RETURN BACK	Shift + Back / Return

Originalfernbedienung Ersatzfernbedienung

