



Originalfernbedienung Ersatzfernbedienung

 

 

 

 

 

 

 



 

 
 
 




 

 
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Lang		Audio / Lang I/II
	Source (Games)		Eject / Surround
	Movie-Music-Phot		Picture / Format
	[≡]..		Zoom / Size
	* / O		Sleep / Timer
	TV		TV/Radio /
	Q.Menu		D.Menu / Top
	[-O-]		Setup / OPT /
	[≡]/Text		Text / Goto

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Up		Up
	i		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	World (Violet)		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	* / Q		Display / Media
	PR-		CH- / Page-
	1		1
	2		2




**Originalfernbedienung Ersatzfernbedienung**

Originalfernbedienung	Ersatzfernbedienung
 3 def 3	 3 3
 4 ghi 4	 4 4
 5 jkl 5	 5 5
 6 mno 6	 6 6
 7 pqrs 7	 7 7
 8 tuv 8	 8 8
 9 wxyz 9	 9 9
 Guide	 Guide / EPG / -/--
 0	 0 0
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Recall	 Shift + Back / Return

**Originalfernbedienung Ersatzfernbedienung**

Originalfernbedienung	Ersatzfernbedienung

