



Originalfernbedienung	Ersatzfernbedienung		
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Lang		Audio / Lang I/II
	Source (Games)		Eject / Surround
	MUSIC-Photo		Picture / Format
	[≡]..		Zoom / Size
	* / O		Sleep / Timer
	TV		TV/Radio /
	Q.Menu		D.Menu / Top
	[- O]		Setup / OPT /
	[≡] / Text		Text / Got o

Originalfernbedienung	Ersatzfernbedienung		
	Menu		Menu / Home
	Up		Up
	i		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Vol +		Vol +
	World (Violet)		Smart / List
	PR+		CH+ / Page+
	Vol -		Vol -
	* / Q		Display / Media
	PR-		CH- / Page-
	1		1
	2		2





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Gui de		Gui de / EPG / - / -				
	0		0				
	Red		Red / Net f l i x / Sear ch				
	Green		Green / APP / Repeat				
	Yel l ow		Yel l ow / YouTube / Repeat				
	Bl ue		Bl ue / Pri me Vi deo / Random				
	Recal l		Shi ft + Back / Ret urn				

