






 



 







 


 


 



 
 
 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Audio		Dual
	Recall		Back
	Tv-Menu		Menu
	Source		AV
	CH.List		List

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Sound		Shift + Dual
	PIC		Options
	CH+		Ch +
	CH-		Ch -
	Sleep		Sleep
	Aspect		3D
	Freeze		Shift + Media
	Tv/Radio		TV/R
	Text		Text






 

 



 




**Originalfernbedienung Ersatzfernbedienung**

	EPG		Guide
	FAV		Pre Ch
	Info		Info
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Reveal		Eject
	Hold		D. Menu
	List		Smart
	Index		Shift + Info
	Subpage		Shift + Subt
	Size		Format
	MIX		Media
	Subtitle		Subt
	<<		<<
	>>		>>

**Originalfernbedienung Ersatzfernbedienung**

	<<		<<
	>>		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec/Rep		Rec

