




 





 









 

 


 
 

 
 
 

 




Originalfernbedienung Ersatzfernbedienung

|   |        |   |               |
|---|--------|---|---------------|
|    | Power  |    | Power         |
|    | Source |    | AV            |
|    | 1      |    | 1             |
|    | 2      |    | 2             |
|    | 3      |    | 3             |
|    | 4      |    | 4             |
|    | 5      |    | 5             |
|    | 6      |    | 6             |
|    | 7      |    | 7             |
|    | 8      |    | 8             |
|   | 9      |   | 9             |
|  | 0      |  | 0             |
|  | Recall |  | Pre Ch        |
|  | TV     |  | TV/R          |
|  | Menu   |  | Menu          |
|  | Q.Menu |  | D. Menu       |
|  | World  |  | Shift + Guide |

Originalfernbedienung Ersatzfernbedienung

|   |          |   |        |
|---|----------|---|--------|
|    | OK       |    | Ok     |
|    | Up       |    | Up     |
|    | Down     |    | Down   |
|    | Right    |    | Right  |
|    | Left     |    | Left   |
|    | PR+      |    | Ch +   |
|    | PR-      |    | Ch -   |
|    | Vol+     |    | Vol +  |
|    | Vol-     |    | Vol -  |
|    | Exit     |    | Exit   |
|   | Back     |   | Back   |
|  | Mute     |  | Mute   |
|  | i        |  | Info   |
|  | Guide    |  | Guide  |
|  | [≡]/Text |  | Text   |
|  | Folder   |  | Format |
|  | [-O-]    |  | Subt   |





| Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---------------------|
|-----------------------|---------------------|

|  |                 |  |         |
|--|-----------------|--|---------|
|  | * / O           |  | Sleep   |
|  | * / Q           |  | Eject   |
|  | Netflix         |  | Media   |
|  | Camera-Music-Ph |  | Options |
|  | YouTube         |  | 3D      |
|  | [≡]..           |  | List    |
|  | Lang            |  | Dual    |
|  | Red             |  | Red     |
|  | Green           |  | Green   |
|  | Yellow          |  | Yellow  |
|  | Blue            |  | Blue    |
|  | Play            |  | Play    |
|  | Rec             |  | Rec     |
|  | Pause           |  | Pause   |
|  | >>              |  | >>      |
|  | <<              |  | <<      |
|  | Stop            |  | Stop    |

| Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---------------------|
|-----------------------|---------------------|

|  |  |
|--|--|
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |

