



 
 
 

 

 

 






 

 
 



 




 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	3D		3D
	Mute		Mute
	[i+]		Info
	P+		Ch +

Originalfernbedienung Ersatzfernbedienung

	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Menu		Menu
	Home		Smart
	Exit		Exit
	Back		Back
	Guide		Guide
	Text		Text
	[>]		Options
	Quick		TV/R
	* / 0		Format





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Subtitle		Subt				
	O)/I/II		Dual				
	*/Q		Shift + Format				
	[+ +]		Eject				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Pause		Pause				
	Play		Play				
	Stop		Stop				
	Rec		Rec				
	>>		>>				
	<<		<<				

