 

 

 

 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 
 
 
 
 
 

 
 




 


 





 



 

 

 
 





 



 
 

 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Open/close		Eject
	Time Shift		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Repeat		Shift + Text
	Play		Play
	Stop		Stop
	Pause		Pause
	<<		<<
	>>		>>
	Pr+		Ch +
	Pr-		Ch -
	Rec		Rec
	Guide		Guide
	Pr List		TV/R
	Timer Rec		Shift + Options
	Info/Display		List
	Enter		Ok
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Return		Back
	Title/Popup		Options




**Originalfernbedienung Ersatzfernbedienung**

	Disc Menu		D. Menu
	Home		Smart
	Red/A/FAV		Red
	Green/B/Page-		Green
	Yellow/C/Page+		Yellow
	Blue/D/Edit		Blue
	I<<		I<<
	>>I		>>I
	Marker		Menu
	Search		Shift + TV/R
	Zoom		Shift + Eject
	Text		Text
	Audio		Dual
	Subtitle		Subt
	PowerTv		Shift + Power
	AV/Input Tv		Media
	Vol+ Tv		Vol +

**Originalfernbedienung Ersatzfernbedienung**

	Vol- Tv		Vol -
	Pr+ Tv		Shift + Up
	Pr- Tv		Shift + Ch +

