







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|---------|
|  | Power |  | Power |
|  | Source |  | AV |
|  | Top Menu |  | Menu |
|  | Disc Menu |  | D. Menu |
|  | Smart TV |  | TV/R |
|  | Bluetooth |  | Guide |
|  | Home |  | Smart |
|  | [≡] |  | Text |
|  | OK |  | Ok |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Left |  | Left |
|  | Right |  | Right |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|---------|
|  | Open/Close |  | Eject |
|  | Return |  | Back |
|  | III |  | Options |
|  | Play |  | Play |
|  | Stop |  | Stop |
|  | Pause |  | Pause |
|  | << |  | << |
|  | >> |  | >> |
|  | I< |  | I<< |
|  | >I |  | >>I |
|  | Vol+ |  | Vol + |
|  | Vol |  | Vol - |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |



