 
 




 

 

 

 



 

 

 

 
 
 
 
 
 
 


 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Source		AV
	Menu		Menu
	P.Mode		Shift + Format
	S.Mode		Shift + Dual

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	Display		Shift + Info
	Enter		Ok
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	FAV/List		Dual
	Freeze		Options
	Tv/Radio		TV/R
	Rec		Rec
	Red		Red
	Green		Green



