





 

 
 
 
 








 

 

 





 

 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|--------------------|
|  | Power |  | Power |
|  | AV |  | AV / Input / RDS |
|  | Mute |  | Mute / Dimmer |
|  | 16:9 |  | Picture / Format |
|  | Zoom |  | Zoom / Size |
|  | Subt. |  | Subtitle / EQ |
|  | Audio |  | Audio / Lang I/II |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | FAV |  | Fav / Marker / PC |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | EPG |  | Guide / EPG / -/-- |
|  | 7 |  | 7 |
|  | 8 |  | 8 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|------------------------|
|  | 9 |  | 9 |
|  | Info |  | Info / Angle |
|  | Back |  | Back / Return |
|  | 0 |  | 0 |
|  | Exit |  | Exit / Cancel / Clear |
|  | Menu |  | Menu / Home |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Vol- |  | Vol- |
|  | Vol+ |  | Vol+ |
|  | PR- |  | CH- / Page- |
|  | PR+ |  | CH+ / Page+ |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-----------------------------|
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | TXT |  | Text / Goto |
|  | ♪ |  | Sound / Title |
|  | [] |  | Smart / List |
|  | Swap |  | Sleep / Timer |
|  | PIP |  | D.Menu / Top |
|  | Pos |  | Setup / OPT / |
|  | Size |  +  | Shift + Zoom / |
|  | Freeze |  | Pause / Step / Freeze |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

