

 

 



 



 

 





 

















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV		TV/Radio /
	0		0
	Recall		Shift + Back / Return
	Vol+		Vol+
	Mute		Mute / Dimmer
	PR+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	World/Internet		Smart / List
	PR-		CH- / Page-
	Menu		Menu / Home
	Q.Menu		D.Menu / Top
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	i		Info / Angle
	Camera/Music/Ph		Picture / Format
	Guide		Guide / EPG / -/-
	*/o		Shift + Guide / EPG / -/-
	*/o..		Fav / Marker / PC





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	[≡]/Text		
	Red		
	Green		
	Yellow		
	Blue		
	Lang		
	[≡]..		
	[-o-]		
	<<		
	Pause		
	>>		
	Rec		
	Play		
	Stop		

