 






 






Originalfernbedienung Ersatzfernbedienung

|   |         |  |                 |
|---|---------|--|-----------------|
|    | Power   |     | Power           |
|    | Source  |     | AV              |
|    | [+]     |     | D. Menu         |
|    | [> <]   |     | Format          |
|    | A/B     |     | Pre Ch          |
|    | EPG [I] |    | Shift + Options |
|    | [i+]    |     | Info            |
|    | Red     |     | Red             |
|    | Green   |     | Green           |
|    | Yellow  |     | Yellow          |
|   | Blue    |    | Blue            |
|  | Up      |   | Up              |
|  | Down    |   | Down            |
|  | Right   |   | Right           |
|  | Left    |   | Left            |
|  | Menu    |   | Menu            |
|  | Return  |  | Shift + Back    |

 
 
 

 
 


Originalfernbedienung Ersatzfernbedienung

|   |       |   |         |
|---|-------|---|---------|
|    | Tools |    | Options |
|    | Mute  |    | Mute    |
|    | Vol+  |    | Vol +   |
|    | Vol-  |    | Vol -   |
|    | Prog+ |    | Ch +    |
|    | Prog- |    | Ch -    |
|    | Text  |    | Text    |
|    | Back  |    | Back    |
|    | 0     |    | 0       |
|    | 1     |    | 1       |
|   | 2     |   | 2       |
|  | 3     |  | 3       |
|  | 4     |  | 4       |
|  | 5     |  | 5       |
|  | 6     |  | 6       |
|  | 7     |  | 7       |
|  | 8     |  | 8       |





Originalfernbedienung Ersatzfernbedienung

|   |         |   |      |
|---|---------|---|------|
|  | 9       |  | 9    |
|  | Digital |  | TV/R |
|  | Analog  |  | List |
|  | OK      |  | Ok   |
|   |         |   |      |
|   |         |   |      |
|   |         |   |      |
|   |         |   |      |
|   |         |   |      |
|   |         |   |      |
|   |         |   |      |
|   |         |   |      |
|   |         |   |      |
|   |         |   |      |
|   |         |   |      |
|   |         |   |      |
|   |         |   |      |
|   |         |   |      |
|   |         |   |      |
|   |         |   |      |
|   |         |   |      |

Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

