 


 










 

 







Originalfernbedienung Ersatzfernbedienung

|   |          |   |       |
|---|----------|---|-------|
|    | Standby  |    | Power |
|    | Mute     |    | Mute  |
|    | PVR Rec  |    | Rec   |
|    | PVR List |    | Smart |
|    | EPG      |    | Guide |
|    | Info     |    | Info  |
|    | TTX      |    | Text  |
|    | Subtitle |    | Subt  |
|    | Audio    |    | Dual  |
|   | DTV/VCR  |    | AV    |
|   | 1        |   | 1     |
|  | 2        |  | 2     |
|  | 3        |  | 3     |
|  | 4        |  | 4     |
|  | 5        |  | 5     |
|  | 6        |  | 6     |
|  | 7        |  | 7     |

Originalfernbedienung Ersatzfernbedienung

|   |           |   |        |
|---|-----------|---|--------|
|    | 8         |    | 8      |
|    | 9         |    | 9      |
|    | 0         |    | 0      |
|    | Menu      |    | Menu   |
|    | EXit      |    | Exit   |
|    | Favourite |    | Pre Ch |
|    | Tv/Radio  |    | TV/R   |
|    | OK        |    | Ok     |
|    | Up        |    | Up     |
|    | CH+       |    | Ch +   |
|   | CH-       |   | Ch -   |
|  | Down      |  | Down   |
|  | Left      |  | Left   |
|  | Vol-      |  | Vol -  |
|  | Right     |  | Right  |
|  | Vol+      |  | Vol +  |
|  | Recall    |  | Format |



