




 
 



 
 

 
 
 


 

 
 

 



 

 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Menu		Menu
	Q.Menu		D. Menu
	Exit		Exit
	Back		Back
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	PR +		Ch +
	PR-		Ch -
	i		Info
	Guide/Tv+Book		Shift + Options
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	TV		TV/R
	[≡]/Text		Text





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
*/o..	Eject		
Source/Game	AV		
*/o	List		
World	Guide		
Music/Movie/Phot	Options		
[-O-]	Sleep		
[≡]..	Subt		
Lang	Dual		
Rec	Rec		
Stop	Stop		
Pause	Pause		
Play	Play		
>>	>>		
<<	<<		

