








 












Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | Hold |  | Stop / Hold |
|  | ♪ |  | Sound / Title |
|  | Sub |  | Subtitle / EQ |
|  | 16:9 |  | Picture / Format |
|  | TV/TX |  | TV/Radio / |
|  | Double |  | D.Menu / Top |
|  | [] |  | Setup / OPT / |
|  | Mix |  | Text / Goto |
|  | AV |  | AV / Input / RDS |
|  | Menu |  | Menu / Home |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------|---|--------------------|
|  | Swap |  | Back / Return |
|  | Vol+ |  | Vol+ |
|  | PP |  | Smart / List |
|  | PR+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | PR- |  | CH- / Page- |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | -/-- |  | Guide / EPG / -/-- |
|  | 0 |  | 0 |



