



Originalfernbedienung Ersatzfernbedienung






 

 








LIGHT ON/OFF	LIGHT On/Off		Power
FAN OFF	Fan OFF		0
1H	1H		Red / Netflix / Search
2H	2H		Green / APP / Repeat
4H	4H		Yellow / YouTube / Repeat
LOW	Fan LOW		1
MED	Fan MED		2
HIGH	Fan HIGH		3

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Light On/Off		Power
	Fan Off		0
	1H		Red / Netflix / Search
	2H		Green / APP / Repeat
	4H		Yellow / YouTube / Repeat
	Fan LOW		1
	Fan MED		2
	Fan HIGH		3

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

















LIGHT ON/OFF	Light On/Off		Power
FAN OFF	Fan Off		0
1H	Timer 1H		Red / Netflix / Search
2H	Timer 2H		Green / APP / Repeat
4H	Timer 4H		Yellow / YouTube / Repeat
LOW	Fan Low		1
MED	Fan Med		2
HIGH	Fan High		3

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
 Light On/Off	 Power
 Fan Off	 0
 Timer 1H	 1
 Timer 2H	 2
 Timer 4H	 3
 Fan LOW	 Yellow / YouTube / Repeat
 Fan MED	 Green / APP / Repeat
 Fan HI	 Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

