

 

 

 



 




 


 

 
 








 





 











 

 





 





 

 
 




**Originalfernbedienung Ersatzfernbedienung**

	Function		Smart / List
	Power		Power
	Open/Close		Eject / Surround
	Sleep		Sleep / Timer
	Title		Sound / Title
	Display		Display / Media
	Menu		Menu / Home
	Setup		Setup / OPT /
	Preset Up		Shift + >> / Preset+
	Preset Up		Up
	Left/Tun-		Left
	Left/Tun-		Shift + << /
	Enter		OK
	Right/Tun+		Right
	Right/Tun+		Shift + >> /
	Preset Down		Shift + I<< / Preset-
	Preset Down		Down

**Originalfernbedienung Ersatzfernbedienung**

	Return		Back / Return
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Play / Mo/St.		Play / Slow
	Pause/Step		Pause / Step / Freeze
	I<< Skip		I<< / Preset-
	<< Scan		<< / Tune-
	Scan >>		>> / Tune+
	Skip >>I		>>I / Preset+
	Audio/Tv->HT SPK		Audio / Lang I/II
	Vol+		Vol+
	Night		Shift + Sleep / Timer
	Mute		Mute / Dimmer
	Vol-		Vol-
	♪/Special EQ		Shift + Subtitle / EQ
	1		1
	2		2





**Originalfernbedienung Ersatzfernbedienung**

	3		3
	Random/Repeat		Green / APP / Repeat
	Random/Repeat		Blue / Prime Video / Random
	4		4
	5		5
	6		6
	[...]/Subtitle		Subtitle / EQ
	7		7
	8		8
	9		9
	0		0
	Power Tv		Shift + Power
	PR/CH+ Tv		Shift + CH+ /
	Vol+ TV		Shift + Vol+
	Prog.Memo		TV/Radio /
	Input Tv		Shift + AV / Input / RDS
	PR/CH- Tv		Shift + CH- /

**Originalfernbedienung Ersatzfernbedienung**

	Vol- Tv		Shift + Vol-
	Clear		Exit / Cancel / Clear
	RDS		AV / Input / RDS
	PTY/Resolution		Picture / Format

