






 

 









 

 








 
 










 



 

 
 
 







 

 
 
 
 

 
 




**Originalfernbedienung    Ersatzfernbedienung**

	Standby/On		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/DVD		TV/R
	Open/Close		Eject
	DTV/Analog		Smart
	Input Sel		AV
	Copy		Options
	Pause		Pause

**Originalfernbedienung    Ersatzfernbedienung**

	I<<		I<<
	>>I		>>I
	Play		Play
	Stop		Stop
	<<		<<
	>>		>>
	Mute		Mute
	Prog+		Ch +
	Prog-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	Return		Back
	Exit		Exit
	Title List/Disc Menu		Media
	Play List/Title Menu		Shift + Menu
	Red		Red




 
 









 
 
 
 
 






















 


 
 
 

 


 





 
 
 
 


 










**Originalfernbedienung    Ersatzfernbedienung**

	Standby/On		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/DVD		TV/R
	Open/Close		Eject
	DTV/Analog		Smart
	Input Sel		AV
	Copy		Options
	Pause		Pause

**Originalfernbedienung    Ersatzfernbedienung**

	<<		<<
	>>		>>
	Play		Play
	Stop		Stop
	<<		<<
	>>		>>
	Prog+		Ch +
	Prog-		Ch -
	Menu		Menu
	Return		Back
	Exit		Exit
	Title List/Disc Menu		Media
	Play List/Title Menu		Shift + Menu
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue



