



























 




 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Nicam/A2		Shift + Audio / Lang I/II
	Sleep		Sleep / Timer
	Aspect		Zoom / Size
	USB/CR		Shift + 8
	Display		Display / Media
	Auto		Smart / List
	PMode		Picture / Format
	SMode		Sound / Title
	DTV		D.Menu / Top
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down












 





 

 

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-		Guide / EPG / -/-
	Back		Back / Return
	CH+		CH+ / Page+
	Info		Info / Angle
	Audio		Audio / Lang I/II









Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	CH-		CH- / Page-
	FAV		Fav / Marker / PC
	Tv/Radio		TV/Radio /
	Vol-		Vol-
	Text		Text / Goto
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop/EPG		Stop / Hold
	Subtitle		Subtitle / EQ
	Rec/Hold		Rec / Rec Mode
	<</Index		<< / Tune-
	>>/Size		>> / Tune+
	I<</Reveal		I<< / Preset-
	>>I/Sbpage		>>I / Preset+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat

Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow / YouTube / Repeat
	Cyan		Blue / Prime Video / Random

