

 



 
 


 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DTV/VCR		Smart
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	Recall		Back
	Audio		Dual
	Subtitle		Subt





 
 
Originalfernbedienung Ersatzfernbedienung

	Info		Info
	Menu		Menu
	EPG		Guide
	Exit		Exit
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Text		Text
	Pause		Pause
	Red		Red
	Green		Green





Originalfernbedienung **Ersatzfernbedienung**

 Yellow	 Yellow
 Blue	 Blue
 Tv/Radio	 TV/R

Originalfernbedienung **Ersatzfernbedienung**

